

# MERCEDES C-CLASS W204 (07-14) STABILISER LINKS (N66-80275 / N66-80274)


## PRE-INSTALLATION LH / RH CHECK

- Hold foreground ball pin facing you
- 150° clockwise (5 o'clock)  
= **RIGHT (N66-80274)**
- 150° anti-clockwise (7 o'clock)  
= **LEFT (N66-80275)**



## INSTALLATION TIPS

- Do not interchange LH / RH parts
- Always replace in pairs
- Torque to OE specs at ride height
- Perform wheel alignment and road test

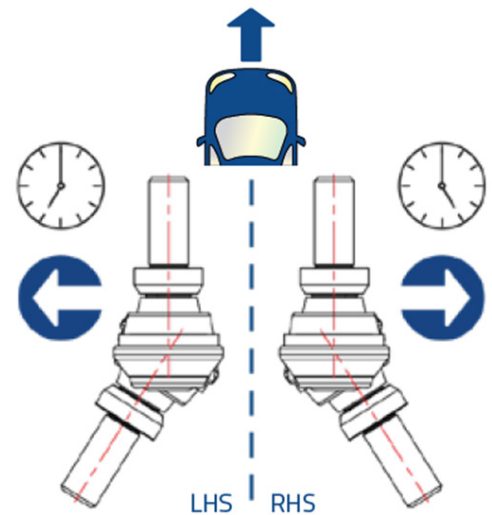

### CONTACT

01302 727 312  
info@nakata.uk

### CONNECT

   /nakatauk  
nakata.uk

**NAKATA<sup>®</sup>**  
**COUNT ON US**